

## INSTALLATION INSTRUCTIONS

# Full Pillar

## For all model Gauge Pods

2650-1157



**NOTE:** Due to normal manufacturing processes you may have “flashing” (small fibers of plastic) around the pod holes. Once the gauge(s) are installed in the pod you will not be able to see the “flashing.”

**Air Bag Warning:** A-pillar gauge mounts should never be installed over an A- pillar or “curtain-side” airbags.

1. **Your new A-pillar cover installs over the stock A-pillar. There is no need to replace the stock pillar.**

2. Remove the stock A-pillar.

\* For Dodge Ram with Infinity speaker, remove speaker from A-pillar. Cut or grind down the raised speaker portion of stock A-pillar to allow the mounting of new A-pillar cover and gauges.

**NOTE:** The other option is to purchase and install the base model A-pillar plastic from your local Dodge dealer. This will save the extensive modification made to the original speaker fitted pillar. You can order the original A-pillar from your local Dodge dealer.

3. Hold the A-Pillar cover in mounting position on the A-pillar. Slight modifications (trimming) of the A-pillar cover may be required for a perfect fit in some applications. Drill  $\frac{3}{16}$ " holes through the four corners of both the A-pillar cover and A-pillar.
4. Install gauges (and/or speaker) in A-pillar cover. No retaining hardware is needed to hold gauge(s) or speaker. The gauges are press fit and the speaker snaps in place.
5. The A-pillar cover has clearance for gauge lines to be run down the back and exit through the bottom. Secure wiring and tubing to the back of the new A-pillar cover. Make sure gauge lines do not interfere with fit. If interference occurs create an opening in the stock A-pillar for the gauge lines to pass through. Secure gauge lines to the back side of the stock A-pillar.
6. Insert ratchet fasteners through holes to install cover on A-pillar.
7. Run gauge lines out through the fire wall to the engine.
8. Install A-pillar cover/A-pillar, making sure lines are not pinched.
9. Connect gauge(s) to vehicle. Follow instructions included with gauge(s) for proper installation and operation.

### Auto Meter Gauge Works Three Year Limited Warranty

Gauge Works warrants to the consumer that all Auto Meter Gauge Works products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter Gauge Works' option to the consumer, when determined by Auto Meter Gauge Works that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the Auto Meter Gauge Works Product and the necessary labor done by Auto Meter Gauge Works to effect the repair or replacement of the Auto Meter Gauge Works product. In no event shall this warranty exceed the original purchase price of the Auto Meter Gauge Works product nor shall Auto Meter Gauge Works be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter Gauge Works must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter Gauge Works disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter Gauge Works. This warranty is made solely by Gauge Works with Auto Meter being the agent to contact for warranty claims. If the partnership between Auto Meter and Gauge Works dissolves, then all warranty adjustments will be covered by the Gauge Works Co.

FOR SERVICE CONTACT: AUTO METER PRODUCTS Inc. 413 W. Elm St., Sycamore, IL 60178 USA (815)899-0801 or

Email us at [service@autometer.com](mailto:service@autometer.com)

© 2006 Auto Meter Products, Inc.

2650-1157 6/12/06

## INSTALLATION INSTRUCTIONS

# Full Pillar

## For all model Gauge Pods

2650-1157



**NOTE:** Due to normal manufacturing processes you may have “flashing” (small fibers of plastic) around the pod holes. Once the gauge(s) are installed in the pod you will not be able to see the “flashing.”

**Air Bag Warning:** A-pillar gauge mounts should never be installed over an A- pillar or “curtain-side” airbags.

1. **Your new A-pillar cover installs over the stock A-pillar. There is no need to replace the stock pillar.**

2. Remove the stock A-pillar.

\* For Dodge Ram with Infinity speaker, remove speaker from A-pillar. Cut or grind down the raised speaker portion of stock A-pillar to allow the mounting of new A-pillar cover and gauges.

**NOTE:** The other option is to purchase and install the base model A-pillar plastic from your local Dodge dealer. This will save the extensive modification made to the original speaker fitted pillar. You can order the original A-pillar from your local Dodge dealer.

3. Hold the A-Pillar cover in mounting position on the A-pillar. Slight modifications (trimming) of the A-pillar cover may be required for a perfect fit in some applications. Drill  $\frac{3}{16}$ " holes through the four corners of both the A-pillar cover and A-pillar.
4. Install gauges (and/or speaker) in A-pillar cover. No retaining hardware is needed to hold gauge(s) or speaker. The gauges are press fit and the speaker snaps in place.
5. The A-pillar cover has clearance for gauge lines to be run down the back and exit through the bottom. Secure wiring and tubing to the back of the new A-pillar cover. Make sure gauge lines do not interfere with fit. If interference occurs create an opening in the stock A-pillar for the gauge lines to pass through. Secure gauge lines to the back side of the stock A-pillar.
6. Insert ratchet fasteners through holes to install cover on A-pillar.
7. Run gauge lines out through the fire wall to the engine.
8. Install A-pillar cover/A-pillar, making sure lines are not pinched.
9. Connect gauge(s) to vehicle. Follow instructions included with gauge(s) for proper installation and operation.

### Auto Meter Gauge Works Three Year Limited Warranty

Gauge Works warrants to the consumer that all Auto Meter Gauge Works products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter Gauge Works' option to the consumer, when determined by Auto Meter Gauge Works that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the Auto Meter Gauge Works Product and the necessary labor done by Auto Meter Gauge Works to effect the repair or replacement of the Auto Meter Gauge Works product. In no event shall this warranty exceed the original purchase price of the Auto Meter Gauge Works product nor shall Auto Meter Gauge Works be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter Gauge Works must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter Gauge Works disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter Gauge Works. This warranty is made solely by Gauge Works with Auto Meter being the agent to contact for warranty claims. If the partnership between Auto Meter and Gauge Works dissolves, then all warranty adjustments will be covered by the Gauge Works Co.

FOR SERVICE CONTACT: AUTO METER PRODUCTS Inc. 413 W. Elm St., Sycamore, IL 60178 USA (815)899-0801 or

Email us at [service@autometer.com](mailto:service@autometer.com)

© 2006 Auto Meter Products, Inc.

2650-1157 6/12/06