

# Cold Air Induction System

Part #1846,18460



## Special Tools

### Required:

- No special tools required

## Install Time:

Approximately  
30 minutes

## Difficulty:

1 out of 5

Follow these instructions carefully to ensure correct fitment and operation

### STEP 1



- Remove the 3 screw pins that hold the battery cover to the body lift up the battery cover and disconnect the negative battery terminal..

### STEP 3




- Remove the 10mm bolt on the right side of the air box that mounts it to the inner fender. Detach the air box from the lower inlet tube on the side of the radiator as you remove the air box. By pulling upwards and towards the firewall.

### STEP 2



- Disconnect the 2 breather hoses from the inlet tube. Loosen the clamps on the inlet tube at the throttle body and the air box, remove the inlet tube from the vehicle.

### STEP 4

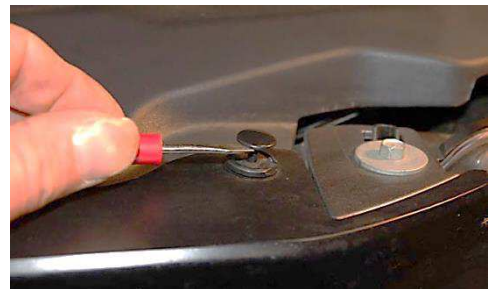

- Remove the plastic radiator cover by prying up the center of the plastic pin heads at the slots cut on each side pull all the pins out and set the cover to the side.



Join our Facebook page  
[www.facebook.com/bbkperformance](http://www.facebook.com/bbkperformance)



Follow us on Twitter  
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube  
[www.youtube.com/bbkperformance](http://www.youtube.com/bbkperformance)

GO TO NEXT PAGE

[WWW.BBKPERFORMANCE.COM](http://WWW.BBKPERFORMANCE.COM)

For any questions, email us:  
[tech@bbkperformance.com](mailto:tech@bbkperformance.com)

installation instructions

1

**IMPORTANT:** All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.


INS-222

# Cold Air Induction System

Part #1846,18460



## STEP 5

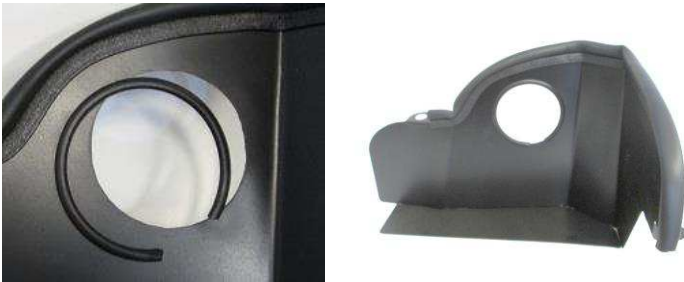

- Install the supplied small trim into the hole that the BBK cold air tube will run thru cut off any access. Install the supplied spongy trim to the top of the Air Filter Shield and cut off any excess trim.

## STEP 6



- Remove the 2 10mm bolts from the driver side radiator mount and remove the mount by pulling it upwards from the vehicle. Install the BBK Air Filter Shield into place by setting it straight down onto the radiator mount peg. Install the stock bolt thru the air shield and bolt it back into the small tab on the inner fender. Reinstall the upper radiator mount and tighten the 2 bolts.

## STEP 7



- Install the tapered BBK coupler onto the throttle body and the supplied clamps. Install the BBK Air Filter thru the hole in the air shield. Install the BBK coupler and supplied clamps. **NOTE: be sure that the coupler and clamps are on the engine side of the air shield when installing onto the air filter.** Install the inlet tube into the coupler on the throttle body. Next slide the air filter onto the inlet tube and connect the (2) vacuum hose to the BBK inlet tube. **NOTE: the air filter will sit at an angle thru the air shield as pictured above.** Position the cold air tube and tighten down all of the clamps.

## STEP 8

- Re-install the radiator cover. Reconnect the negative battery terminal. Place the battery cover back onto the battery and reinstall the 3 screw pins.

Revised 2/25/2013



GO TO NEXT PAGE

[WWW.BBKPERFORMANCE.COM](http://WWW.BBKPERFORMANCE.COM)

For any questions, email us:  
[tech@bbkperformance.com](mailto:tech@bbkperformance.com)

installation instructions

2

**IMPORTANT:** All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-222

# Cold Air Induction System

Part #1846,18460



**!! Please follow the ECU Relearn procedure before driving on the road!!**



**Because your vehicle's engine is electronically controlled by a computer, some control conditions are maintained by power from the battery. When the battery is disconnected or a new battery is installed, the engine must relearn its idle and fuel trim strategy for optimum drive-ability and performance. To begin this process:**

- 1.) **With the vehicle at a complete stop, set the parking brake.**
  - 2.) **Put the gearshift in P (Park) (automatic transmission) or the neutral position (manual transmission), turn off all accessories and start the engine.**
  - 3.) **Run the engine until it reaches normal operating temperature. Approximately 4-5 minutes.**
  - 4.) **Allow the engine to idle for at least one minute.**
  - 5.) **Turn the A/C on and allow the engine to idle for at least one minute.**
  - 6.) **Drive the vehicle to complete the relearning process.**
- **The vehicle may need to be driven 10 miles or more to relearn the idle and fuel trim strategy.**
  - **If you do not allow the engine to relearn its idle trim, the idle quality of your vehicle may be adversely affected until the idle trim is eventually relearned.**



Join our Facebook page  
[www.facebook.com/bbkperformance](http://www.facebook.com/bbkperformance)



Follow us on Twitter  
 @bbkperformance



Check us out on Youtube  
[www.youtube.com/bbkperformance](http://www.youtube.com/bbkperformance)

[WWW.BBKPERFORMANCE.COM](http://WWW.BBKPERFORMANCE.COM)

For any questions, email us:  
[tech@bbkperformance.com](mailto:tech@bbkperformance.com)

installation instructions

3

**IMPORTANT:** All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-222