



Read complete instructions
before installation!
Improper installation may
void warranty

Description: Head Light

Part Number: 121217-121218

Application: 2006-2008 Dodge Charger



Tools needed: Phillips screwdriver, flat head screwdriver, 10mm socket, 7mm socket, wire splicer, electrical tape

Step 1: Use the flat head screw driver to remove the five push pins located at the top of the bumpers.



Step 2: Use the 10mm socket to remove the bolt located under the top fender.



Step 3: Remove the five push pins located in the front tire well.



Step 4: Use the flat head screwdriver to remove the push pin located in the front tire well.




Step 5: Use the 10mm socket to remove the bolt located behind the wheel well tire shroud.






Step 6: Remove the 10mm bolt located inside the fender behind the headlight housing.



Step 7:

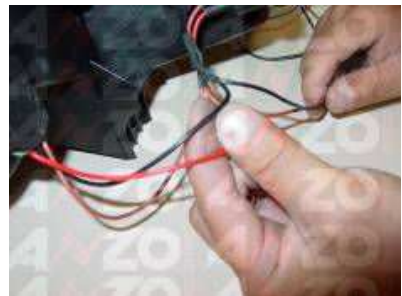

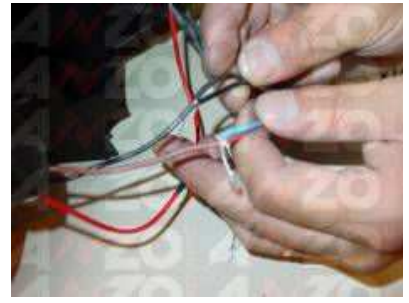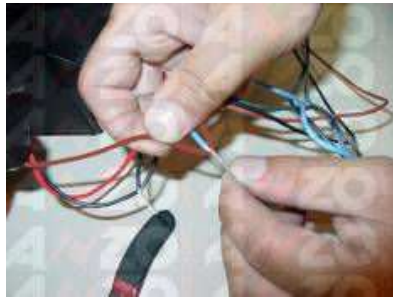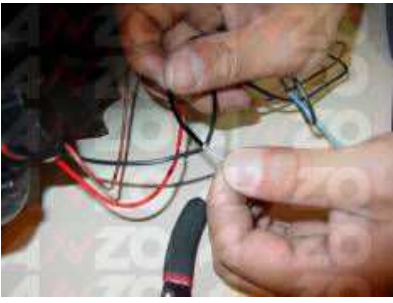

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.